

problem with rrlload Boot loader on innovator using CCS

Source: <http://coding.derkeiler.com/Archive/General/comp.arch.embedded/2005-10/msg00283.html>

- *From:* sudheer.thota@xxxxxxxxxx
 - *Date:* 10 Oct 2005 19:50:54 -0700
-

Dear all,

I bulided rrlload bootloder for innovator(omap1510) Board.
After bulild when i am try to run on CCS its runing and its loading,
but its not displaying the menu on serial console.

i am using teraterm pro for serial emulation(i tried with hyper terminal also) with 115200-8-0-1-0 for COM1.
i debugged that serail console is working properly.

Can any body tell what's going wrong.

i am using binutils-2.1.2,gcc-2.95.3,glibc-2.2.3 toolchain for crosscompilation.

i tried with u-boot also, same thing happening, nothing coming on Serial terminal.

i reffered "Building Linux for the innovator Development Kit for OMAP Platform"(SWPA011) and all the related docs from ti.

Do we have any other method to burn the boot loader to flash.i have CCS-2.20 version and iam using ti XDS560 jtag.i boot host(this is not working for bin files flash buring)

Thanks in advance!

Thota

-
- Prev by Date: [***Re: Is hot swapping TrueIDE mode Compact Flash possible?***](#)
 - Next by Date: [***Re: Problems with HCS12***](#)
 - Previous by thread: [***Is hot swapping TrueIDE mode Compact Flash possible?***](#)
 - Next by thread: [***PIC24 16-bit MCUs***](#)
 - Index(es):

problem with rrlod Boot loader on innovator using CCS

- ◆ Date
- ◆ Thread